


# SILVER SPORT

*Transmissions*

## FIREWALL STIFFENER BRACKET AND PEDAL LINKAGE INSTALLATION MANUAL 1963 – 1967 C2 CORVETTE

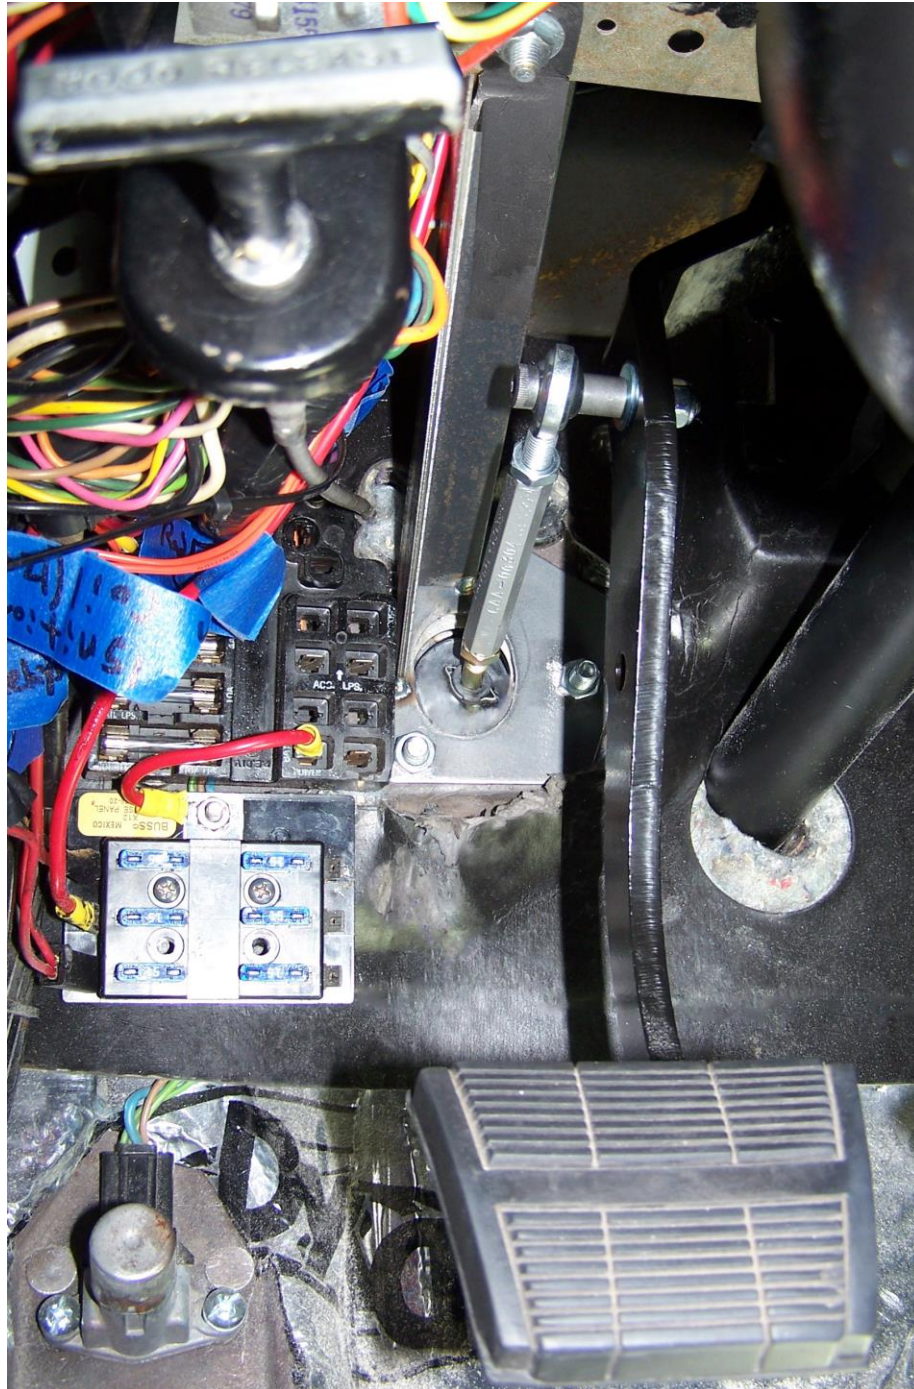

- 1) Install the Firewall Stiffener Bracket as shown in the picture with bolt, lock washer and nut to the upper dash support. Insert bolts thru master cylinder mount from firewall engine side thru stiffener bracket holes and install lock washer and nut (2 places). Note: Top driver side location has nut welded to stiffener base plate. Bottom driver side location will be the stud welded to master cylinder mount.
- 2) If installing in factory 4 spd car, remove stop bracket with mechanical linkage clutch rod pin from clutch pedal to provide clearance for new hydraulic linkage. Pedal stop is not needed since pedal travel is controlled by linkage connection to the new master cylinder push rod.
- 3) Install pedal linkage to master cylinder rod as shown below using existing hole in pedal and adjust pedal height.

