




SILVER SPORT
Transmissions

HYDRAULIC BEARING REPLACEMENT INSTALLATION INSTRUCTIONS

NOTE: In applications where the bellhousing is bolted to the transmission prior to installation, the locating stud is not needed. In these instances, the replacement hydraulic bearing can be installed using your original hex bolts and lock washers.

For applications where the bellhousing must be bolted to the engine before installing the transmission, installing the locating stud into the front bearing retainer is necessary.

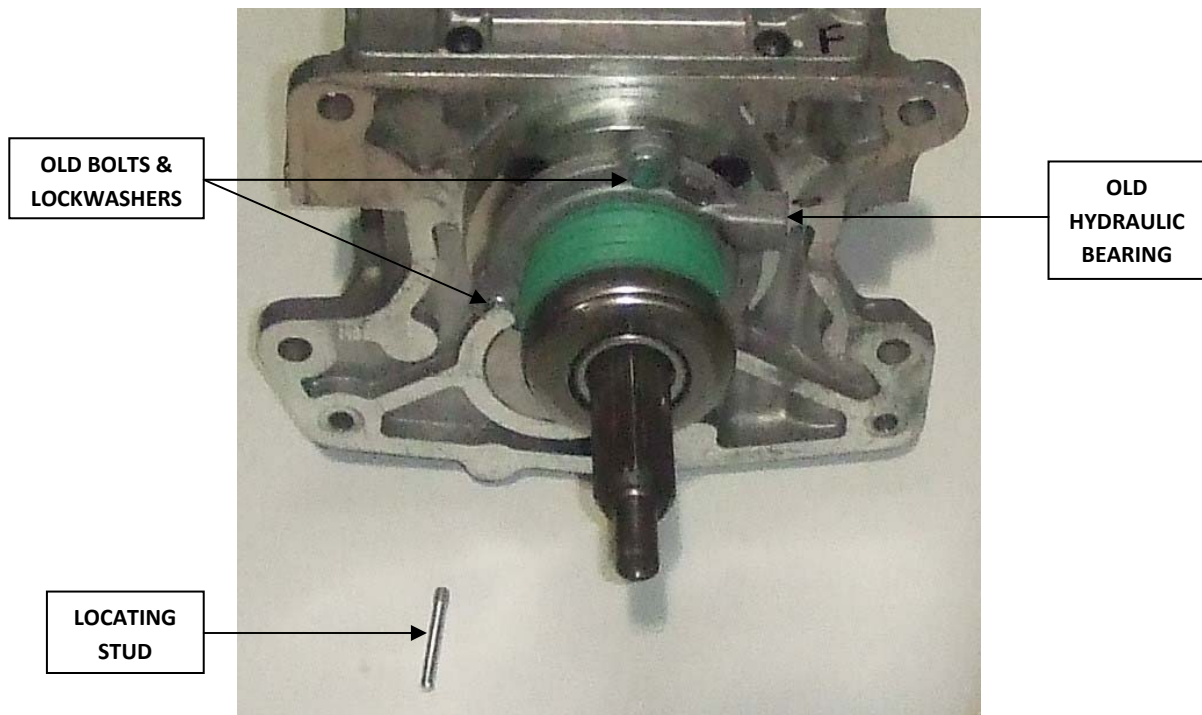

1. Remove the two hex bolts, two lockwashers, and the old hydraulic bearing.
2. Apply Red Loctite #272 Threadlocker to locating stud threads.
3. Install the locating stud to the front bearing retainer using the upper hole in the 12 o' clock position (see photo below).



4. Allow the Threadlocker to cure for 24 hours.
5. Install the replacement hydraulic bearing and hydraulic line according to the detailed instructions per MAG-00402_revD (GM) or MAM-00201_revD (FORD/MOPAR) Hydraulic Kit Installation Manual.